


Product Information *Arbre de Vie* Small scale

RESSOURCE
ANTOINETTE POISSON COLLECTION

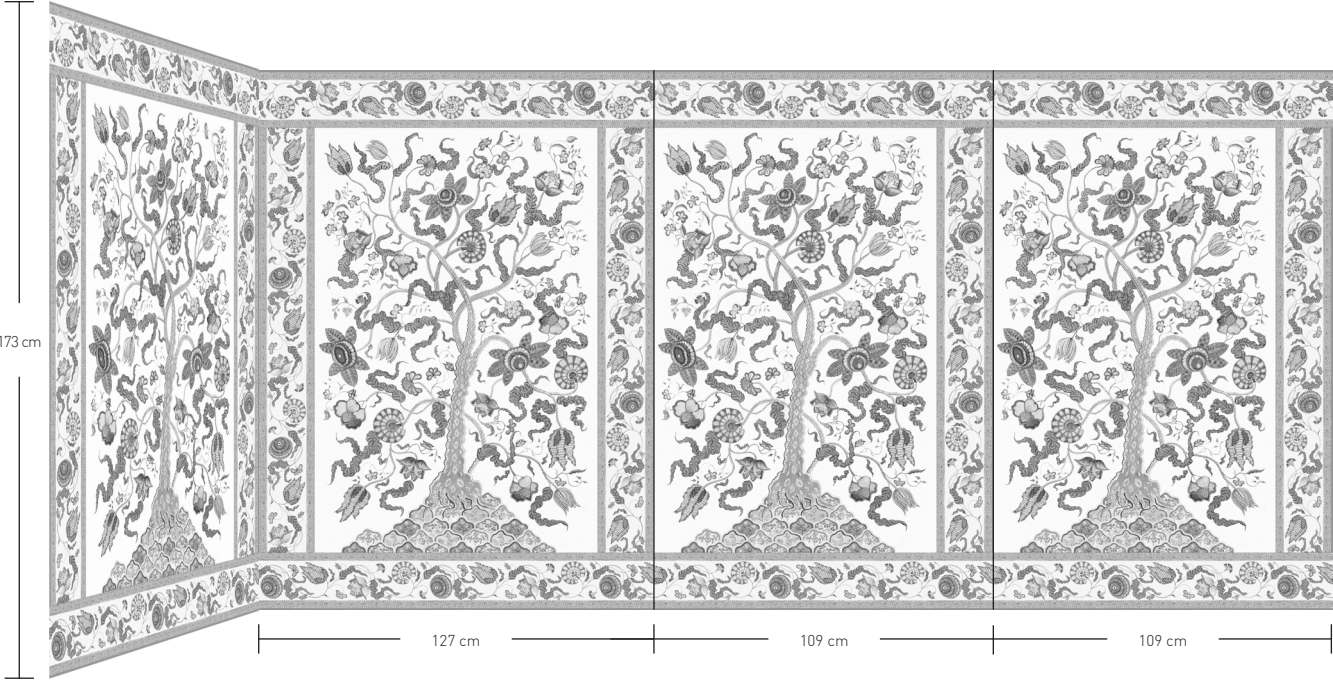

COMPOSED OF 2 STRIPS

Width	▶ 127 cm
Lenght	▶ 173 cm
Frieze included	▶ 18 cm

In corners, it's more aesthetically pleasing to keep the two side friezes.
Cut every other side frieze when the pattern is repeated on the wall, so that the top and bottom friezes connect.
The remaining friezes can be used to fill the gap above a door, for example.



CAUTION

We have chosen to use natural wallpaper made from cellulose fibres with no surface treatment after printing. We use water-based latexencapsulated ink which is certified for its low environmental impact.

Due to its environmental properties this deep matte paper needs to be handled with care:

1. How to prevent your paper from shining:

We recommend you use a smoothing brush carefully and work primarily with your hands for a softer touch. This will allow you to get a feel of the paper.

2. How to limit wallpaper shrinkage:

This non-woven paper is a living material composed of natural fibres. To ensure the paper adapts to the general humidity of the room, we recommend you take it out of its wrapping 24 hours before hanging. Before, during and up to 24h after decorating, ensure there are no draughts or changes in temperature, air conditioning or direct heating anywhere near the paper.

3. We recommend you use our RESSOURCE paste specially designed for RESSOURCE wallpapers ensuring a perfect finish. This paste is 94% natural (corn starch and water) and contains no VOCs.

4. How to avoid getting paste on your paper:

Wash your hands, your tools and sponge as soon as you get any paste on them. To remove wallpaper paste : use a damp and well-wrung sponge. Lightly wipe away without scrubbing or pressing down as this may cause the ink to run and the colors to fade.



Watch our application tutorial on
www.ressource-peintures.com

AT RESSOURCE, WE DO OUR UTMOST TO MAKE THE HIGHEST QUALITY WALLPAPER. SLIGHT IRREGULARITIES MAY HOWEVER BE NOTICED IN OUR DESIGNS. THIS IS DUE TO OUR MANUFACTURING PROCESS AND SHOULD NOT BE CONSIDERED AS A DEFECT.



SURFACE PREPARATION

Before starting, ensure all walls are sound, dry, clean, smooth and uniform color. Recommended products: Powder Matte, Essential Matte.

WALLPAPER PASTE AND TOOLS [available in our stores and on our eshop]

- RESSOURCE wallpaper paste
- A paint roller cover microfibre 10mm
- A triangular brush special aqueous.
- A tape measure
- A plumb line or spirit level
- A trimming ruler
- A pencil
- A cutter with sharp snap-off blades
- A wallpaper smoother to round the edges
- Meticulously clean hands
- A clean sponge

HANGING AND APPLICATION INSTRUCTIONS

1 | Position the 1st strip length

Using a level from the corner of the wall, draw a fine line down the wall the width of one strip of wallpaper plus 5 mm. This will serve as a guide to get the wallpaper strip length perfectly straight. It will be under the second strip as you paste the first strip 5 mm towards the inside of the line.

2 | Paste the wall

Using the roller, spread the paste evenly over the wall to the width of the strip, extending well beyond it towards the next strip. Use the brush to apply the paste in corners and nooks. Let the paste set for 2 to 3 minutes before applying the paper.

3 | Paste the 1st strip

Roll up the first strip with the pattern on the inside. Position the roll on the top of the wall. Progressively roll the strip of paper down, smoothing it out as you go and following the previously drawn pencil line.

4 | Smooth the wallpaper

Roll the paper with clean, bare hands, using gentle, sweeping movements. For even pasting, carefully sweep the entire surface, from top to bottom and to eliminate air bubbles. You can also use the wallpaper smoother to break the corners of the paper at the ends of the wall. On the edge of the strip, press gently with your index finger along the entire height and width of the strip to press the paper firmly against the wall.

5 | Trimming (if necessary)

Using a smoother adjust the wallpaper at the skirting board and the ceiling. If the paste has dried in places, apply some more with the brush. Take a trimming ruler and cut off the excess paper with a sharp cutter. Snap off the tip of the blade for each strip for a perfect cut.

6 | Paste and lay the following strips

Using the roller and brush, spread the adhesive evenly over the wall. Roll up the with the pattern on the inside. Position the roller on the top of the first strip, respecting the joint. Unroll and roll out the paper gradually (see step 4), then trim if necessary.



FRENCH MANUFACTURER SINCE 1946

All our wallpaper is printed in Provence in our workshops.

www.ressource-peintures.com @ressource_peintures